
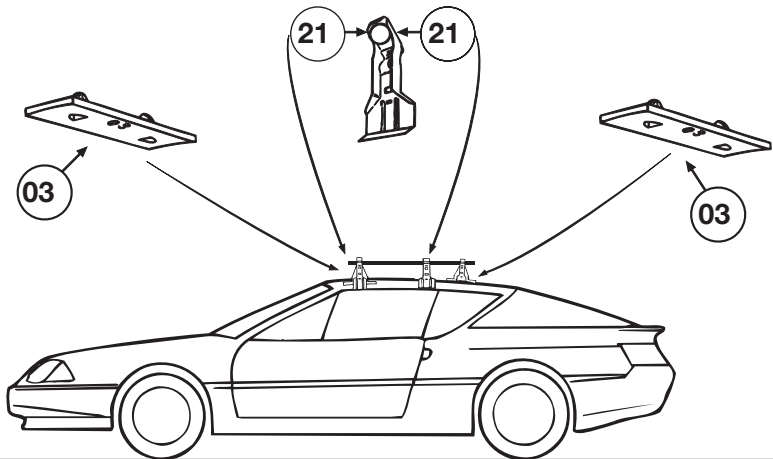
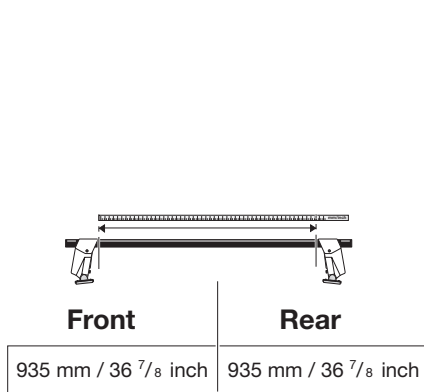


Thule System Kit 045




RENAULT Alpine 2-dr, 85-

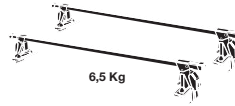





247•4DF/501-0045-02

Thule System Kit 046

FORD Scorpio 4-dr Sedan, 90-
5-dr Hatchback, 85-

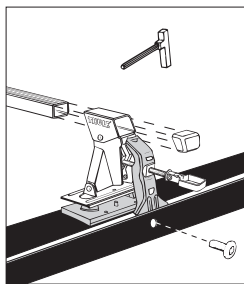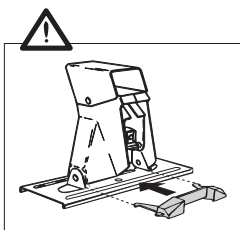

IMPORTANT!
When unmounting the loadcarrier please fasten the screw M8x25 in the screwholes of the car. It will prevent dirt and water to penetrate.

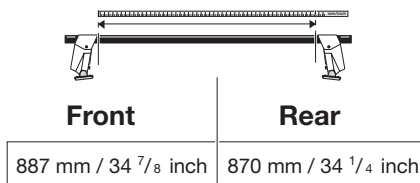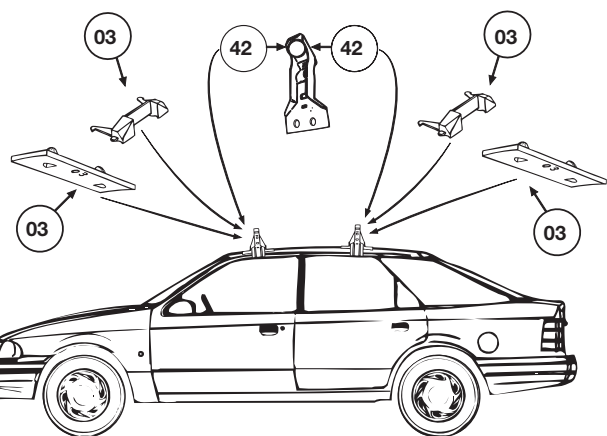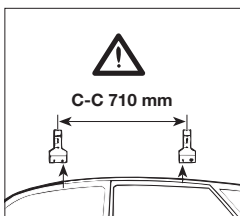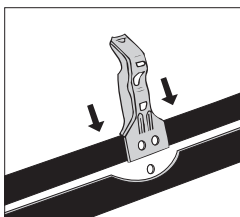

312•4DF/501-0046-05